## Non-Locking Wingknob Handle, C-WHNL


Hoffman®

- 1. Remove M6 screw fastening existing insert to latch assembly.
- 2. Remove insert, o-ring, and wave washer from latch housing.
- 3. Assemble handle, new o-ring, and wave washer to latch housing as shown in figure 1.
- 4. Reinstall M6 screw to handle and torque to 4.3 NM (38 in–lbs).

NOTE: Not recommended for multiple point latch systems.

A Pentair Company

Hoffman Enclosures Inc.
2100 Hoffman Way
Anoka, MN 55303–1745
(763) 422–2211 Tel
www boffmanopline com

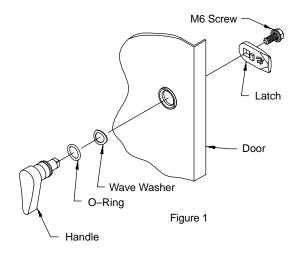




Figure 2 (Back Side of Door)